



FT730 Guide

System 5

Legal Notices

This guide is copyrighted ©2011 by Avid Technology, Inc., (hereafter “Avid”), with all rights reserved. Under copyright laws, this guide may not be duplicated in whole or in part without the written consent of Avid.

003, 96 I/O, 96i I/O, 192 Digital I/O, 192 I/O, 888|24 I/O, 882|20 I/O, 1622 I/O, 24-Bit ADAT Bridge I/O, AudioSuite, Avid, Avid DNA, Avid Mojo, Avid Unity, Avid Unity ISIS, Avid Xpress, AVoption, Axiom, Beat Detective, Bomb Factory, Bruno, C|24, Command|8, Control|24, D-Command, D-Control, D-Fi, D-fx, D-Show, D-Verb, DAE, Digi 002, DigiBase, DigiDelivery, Digidesign, Digidesign Audio Engine, Digidesign Intelligent Noise Reduction, Digidesign TDM Bus, DigiDrive, DigiRack, DigiTest, DigiTranslator, DINR, DV Toolkit, EditPack, Eleven, HD Core, HD I/O, HD MADI, HD OMNI, HD Process, Hybrid, Impact, Interplay, LoFi, M-Audio, MachineControl, Maxim, Mbox, MediaComposer, MIDI I/O, MIX, MultiShell, Nitris, OMF, OMF Interchange, PRE, ProControl, Pro Tools, Pro Tools|HD, QuickPunch, Recti-Fi, Reel Tape, Reso, Reverb One, ReVibe, RTAS, Sibelius, Smack!, SoundReplacer, Sound Designer II, Strike, Structure, SYNC HD, SYNC I/O, Synchronic, TL Aggro, TL AutoPan, TL Drum Rehab, TL Everyphase, TL Fauxlдер, TL In Tune, TL MasterMeter, TL Metro, TL Space, TL Utilities, Transfuser, Trillium Lane Labs, Vari-Fi, Velvet, X-Form, and XMON are trademarks or registered trademarks of Avid Technology, Inc. Xpand! is Registered in the U.S. Patent and Trademark Office. All other trademarks are the property of their respective owners.

Product features, specifications, system requirements, and availability are subject to change without notice.

Guide Part Number 9329-65140-00 REV A 08/11

Documentation Feedback

We are always looking for ways to improve our documentation. If you have comments, corrections, or suggestions regarding our documentation, email us at techpubs@avid.com.

Contents

- Chapter 1. Introduction to the FT730** 1
 - System Requirements and Compatibility 1
 - About This Guide 1
 - About www.avid.com 2
- Chapter 2. FT730 Features** 3
 - Front Panel 3
 - Back Panel 4
 - Specifications 6
 - Applications 7
 - Technical Reference 8
- Appendix A. Compliance Information** 9
 - Environmental Compliance 9
 - EMC (Electromagnetic Compliance) 10
 - Safety Compliance 11

Chapter 1: Introduction to the FT730

The FT730 FiberTran Fiberoptic Extender allows an ML530 Microphone/Line preamplifier or MC524 Monitor Controller to be placed up to 3300 ft (1 km) away from the processing core of an Avd Pro Series digital console. The FT730 is always used in pairs with one local unit at the control end and one remote unit at the far end connected by up to 1 km of fiberoptic cable. Normally, four fibers are used:

- One pair sends audio sync and control information to the remote end and receives status information back.
- The second pair sends and receives MADI.

The same device is used at both ends but their functionality differs: If a sync source is connected (AES or word clock), it is a local unit; otherwise, the device looks for sync on the sync fiber and, if found, behaves as a remote unit.

System Requirements and Compatibility

Avid can only assure compatibility and provide support for hardware and software it has tested and approved.

For complete system requirements and a list of qualified computers, operating systems, hard drives, and third-party devices, visit www.avid.com/compatibility.

About This Guide

This guide provides a basic overview of FT730 features and functionality.

For complete instructions on connecting and configuring your system, see the *System 5 Installation Guide*.

Conventions Used in This Guide

All of our guides use the following conventions to indicate menu choices and key commands:

Convention	Action
File > Save	Choose Save from the File menu
Control+N	Hold down the Control key and press the N key
Control-click	Hold down the Control key and click the mouse button
Right-click	Click with the right mouse button

The names of Commands, Options, and Settings that appear on-screen are in a different font.

The following symbols are used to highlight important information:



User Tips are helpful hints for getting the most from your system.



Important Notices include information that could affect your data or the performance of your system.



Shortcuts show you useful keyboard or mouse shortcuts.



Cross References point to related sections in this guide and other Avid guides.

About www.avid.com

The Avid website (www.avid.com) is your best online source for information to help you get the most out of your system. The following are just a few of the services and features available.

Product Registration Register your purchase online.

Support and Downloads Contact Avid Customer Success (technical support); download software updates and the latest online manuals; browse the Compatibility documents for system requirements; search the online Knowledge Base or join the worldwide Avid user community on the User Conference.

Training and Education Study on your own using courses available online or find out how you can learn in a classroom setting at a certified Avid training center.

Products and Developers Learn about Avid products; download demo software or learn about our Development Partners and their plug-ins, applications, and hardware.

News and Events Get the latest news from Avid or sign up for a demo.


Chapter 2: FT730 Features

Front Panel

The front panel has LEDs that indicate the status of the power supplies, synchronization activity, and the status of several other functions. Each group is discussed in the following sections.



FT730 Front Panel

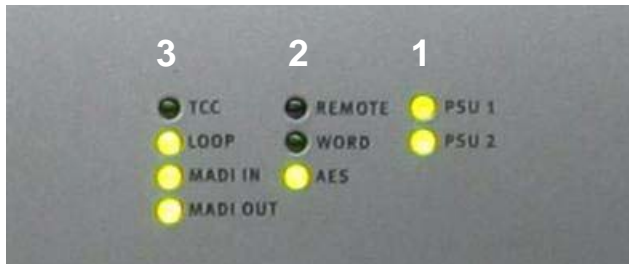

FT730 front panel (detail)

1. Power

The system has two power supplies for redundancy. A simple monitoring circuit checks whether each supply is functioning within allowable limits and displays their status on the PSU 1 and PSU 2 LEDs on the front panel. The information is also sent over the fiber link to the remote end. The LEDs indicate the following status:

Solid Both power supplies are functioning normally.

Flashing Remote power supply has failed.

Off Local power supply has failed.

2. Sync

Remote The unit is locked to sync coming from the local unit over the fiber link.

Word The unit is locked to sync on the word clock sync input.

AES The unit is locked to sync on the AES sync input.

If the unit is locked to Word or AES sync, it is designated as the local unit and sends digital sync to the remote unit over the fiber link.

3. Status


TCC Indicates TCC data activity.

Loop Indicates that the TCC/Sync fiber loop is complete and the time of flight has been calculated.

MADI IN Indicates that a MADI signal is present on the 75-W BNC MADI In and also on the Fiber TX connector.

MADI OUT Indicates that a MADI signal is present on the 75-W BNC MADI Out and also on the Fiber RX connector.


Back Panel

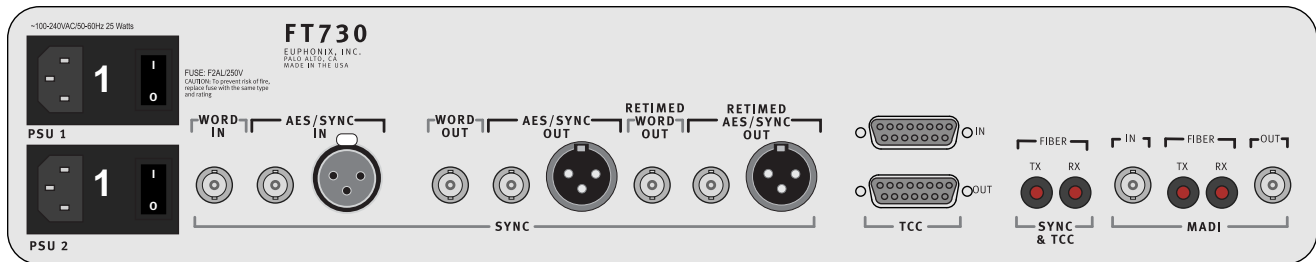

FT730 back panel

1. Power Connectors (IEC)

Accepts two standard IEC power cords (provided). Two autotransforming switching supplies accept voltages in the range 100–240 VAC, 50–60 Hz.

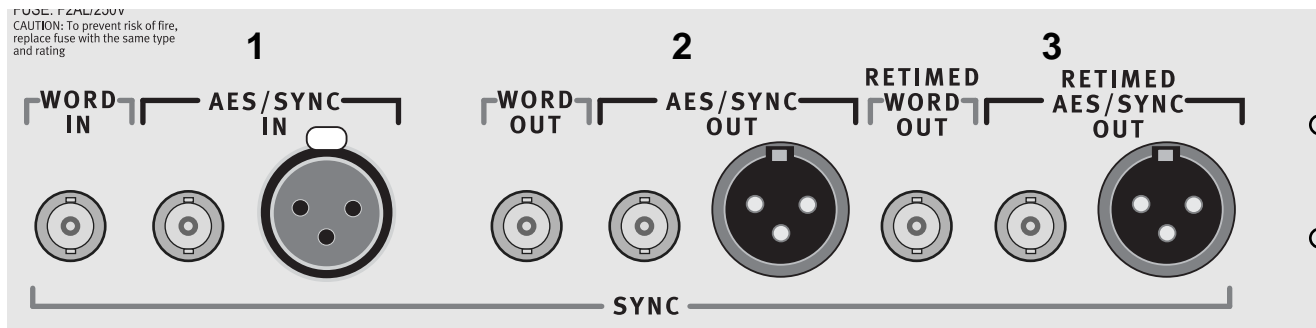

FT730 back panel (detail)

1. AES/SYNC IN (female XLR or BNC), WORD IN (BNC)


Connect this port to a digital sync reference (local unit only). Selection for XLR or BNC input is done using two internal jumpers shown in Figure 4. The unit is shipped with the jumpers set for the XLR input.

2. AES/SYNC OUT (male XLR or BNC), WORD OUT (BNC)


Connect one of these ports to the digital sync reference input of any device receiving MADI at the remote unit. Only one output connection (XLR or BNC) should be used at a time.

3. RETIMED AES/SYNC OUT (male XLR), RETIMED WORD OUT (BNC)

Connect one of these ports to the digital sync reference input of any device sending MADI from the remote unit back to the local unit. See Synchronization for Distances Over 800 ft (250 m) on page 13 for more information about these outputs.

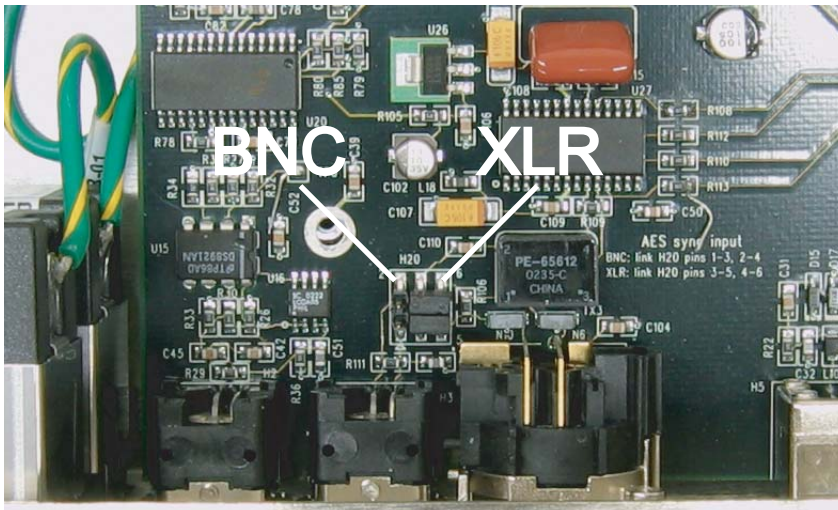

Internal sync input jumper

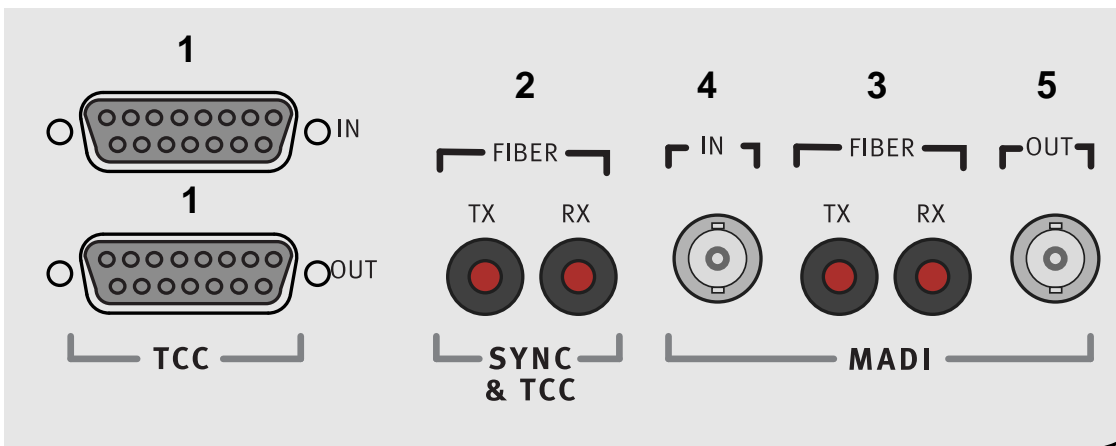

Back panel TCC, MADI, and fiber connectors

1. TCC IN/Out (DB15)

- Connect TCC IN to TCC control port at local unit.
- Connect TCC OUT to TCC control port at remote unit.

Because the same unit is used at both ends, each has a TCC IN and a TCC OUT connector. However, only the TCC IN is intended to be used at the local end and the TCC OUT at the remote end.

2. FIBER SYNC/TCC TX/RX (ST Optical Connector)

Connects local and remote units. Connect local RX and TX to remote TX and RX, respectively. Both connections are required for proper operation.

3. FIBER MADI TX/RX (ST Optical Connector)

Connects local and remote units. Connect local RX and TX to remote TX and RX, respectively. A single connection can be used if MADI signals are only required for one direction.


4. MADI IN (BNC)

MADI connection for signal being transmitted over fiber.

5. MADI OUT (BNC)

MADI connection for signal being received from fiber.


Specifications

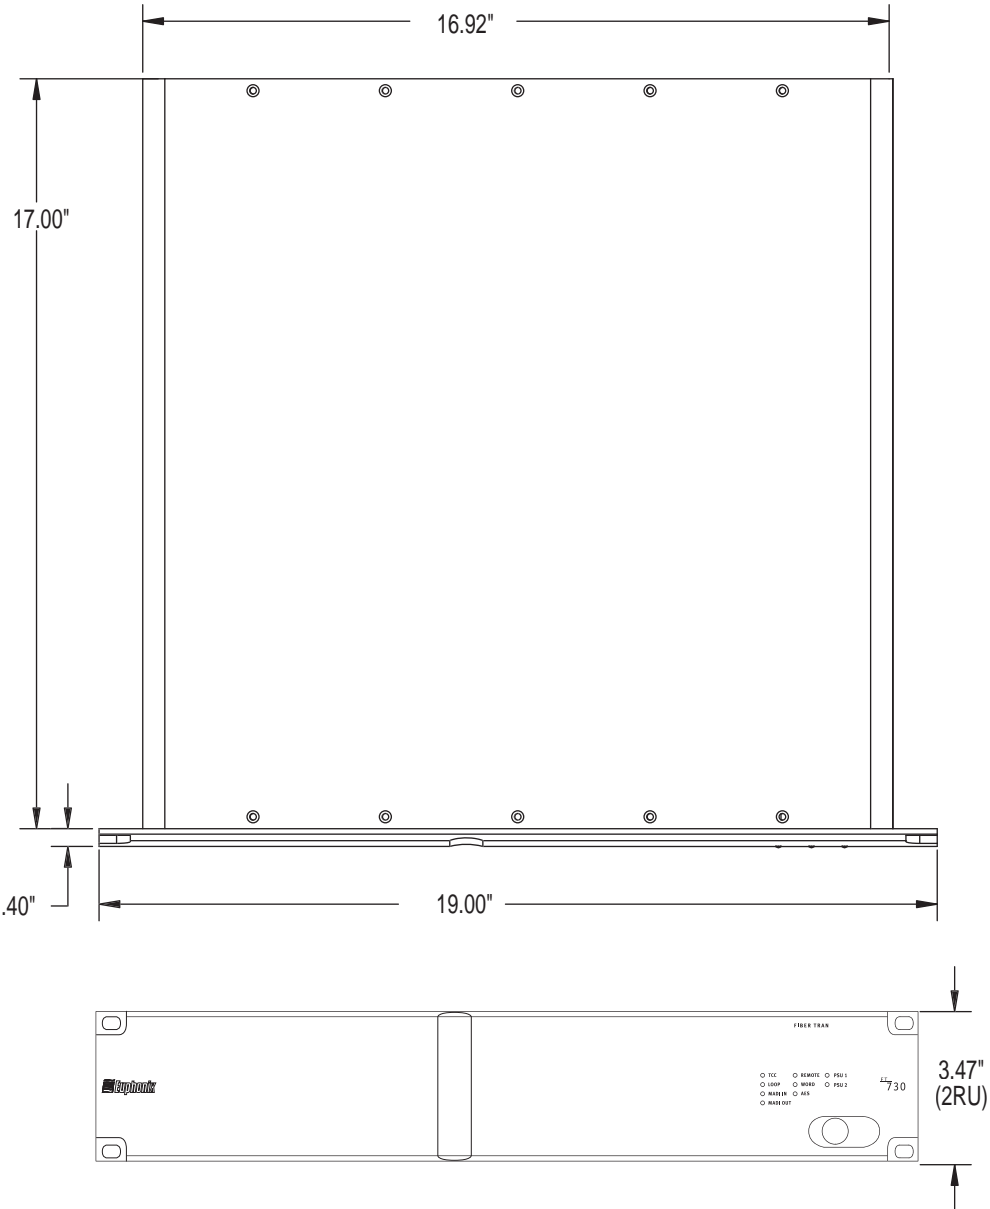

FT730 dimensions

Weight	11.6 lb (5.2 kg)
Power	25 W
Cable Requirements	The FT730's fiber transceivers work only with 62.5/125 mm multimode fiber with ST connectors.
Maximum Fiber Distance	3300 ft (1000 m)

Applications

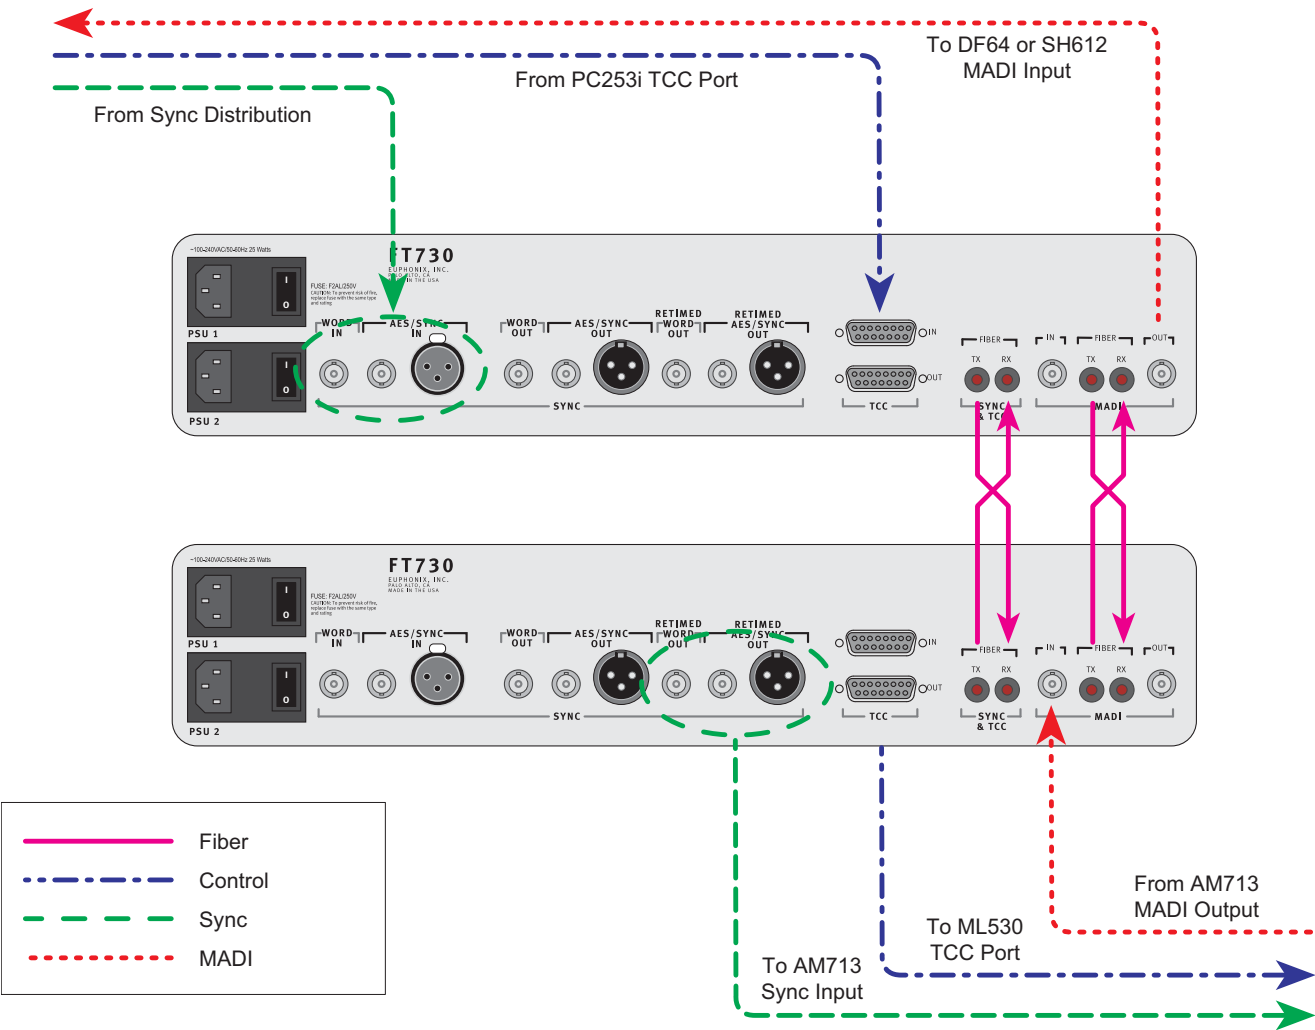

FT730 connection diagram

Technical Reference

Synchronization for Distances Over 800 ft (250 m)

MADI utilizes a polarity-free, serial NRZI (non-return-to-zero inverted) protocol with encoding at 125 Mbit/s (± 100 ppm). Sample timing is controlled independently by distributing a master synchronization signal. Originally, the transmission medium was 75- Ω coaxial cable. There are two important synchronization issues:

- The MADI signal's transmitted frame start time must be within 5% of the sample period time determined by the synchronizing signal.

This requirement is usually met by the circuit design using the distributed synchronization signal.

- The received frame start time must be within $\pm 25\%$ of the sample period reference time.

This requirement is governed by physics: it is the time of flight (delay time) difference between the sample start and the start of the frame. The speed of light (299,792,458 m/s) and the propagation speed of the transmission medium govern this delay time.

Transmission mediums, such as fiber and coaxial cable, have propagation speeds in the range 60–70% of the speed of light. This does not present a problem when MADI and the synchronization signal are sent together to a destination, such as a MA703. The problem manifests when MADI is used to return data from a source such as an AM713, where the delay time difference for the MADI and synchronization signals exceeds the received frame start time requirement ($\pm 25\%$ of the sample period reference time).

The FT730 has two types of synchronization outputs:

AES/Sync or Word Out Used for devices receiving MADI at the remote end. These outputs are used if the signal meets the criteria stated in the first bullet above.

Retimed AES or Retimed Word Sync Used for devices transmitting MADI to the local end. The control/sync fiber pair is used to measure at the local end by comparing the local sync timing with that returned from the remote end. This number is sent to the remote end where the timing is adjusted in sixteenth frame increments to keep it within the operational requirements stated in the second bullet above.

Single Mode vs. Multimode Fiber Optic Cable

In optical fiber technology, multimode fiber is optical fiber that is designed to carry multiple light rays (modes) concurrently. Each mode is carried at a slightly different reflection angle within the optical fiber core. Multimode fiber transmission is used for relatively short distances (less than 6500 ft/2000 m) because the modes tend to disperse over longer lengths (modal dispersion). For distances longer than 6500 ft (2000 m), single mode fiber (sometimes called monomode) fiber is used. Multimode fiber has a typical core diameter of 50–100 μ m with a refractive index that is graded or stepped. It allows the use of inexpensive LED light sources, and connector alignment and coupling is less critical than for single mode fiber. This translates into lower connection and electronics costs and consequently lower overall system costs. The FT730 uses 62.5/125 μ m multimode fiber with ST connectors.

Appendix A: Compliance Information

Environmental Compliance

Disposal of Waste Equipment by Users in the European Union



This symbol on the product or its packaging indicates that this product must not be disposed of with other waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city recycling office or the dealer from whom you purchased the product.

Proposition 65 Warning

⚠ *This product contains chemicals, including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.*

Perchlorate Notice

This product may contain a lithium coin battery. The State of California requires the following disclosure statement: "Perchlorate Material – special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate."

Recycling Notice



EMC (Electromagnetic Compliance)

Avid declares that this product complies with the following standards regulating emissions and immunity:

- FCC Part 15 Class A
- EN55103-1 E4
- EN55103-2 E4
- AS/NZS CISPR 22 Class A
- CISPR 22 Class A

FCC Compliance for United States

Communication Statement

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Any modifications to the unit, unless expressly approved by Avid, could void the user's authority to operate the equipment.

Australian Compliance



Canadian Compliance

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

CE Compliance

(EMC and Safety)



Avid is authorized to apply the CE (Conformité Européenne) mark on this compliant equipment thereby declaring conformity to EMC Directive 2004/108/EC and Low Voltage Directive 2006/95/EC.

Safety Compliance

Safety Statement

This equipment has been tested to comply with USA and Canadian safety certification in accordance with the specifications of UL Standards: UL 60950-1:2007, 2nd Ed and CAN/CSA-22.2 No. 60950-1-07, 2nd Ed. Avid Inc., has been authorized to apply the appropriate NRTL mark on its compliant equipment.

Warning



Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this equipment near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other equipment (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect power cords from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the equipment.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) For products that are not rack-mountable: Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the equipment. When a cart is used, use caution when moving the cart/equipment combination to avoid injury from tip-over.

13) Unplug this equipment during lightning storms or when unused for long periods of time.

14) Refer all servicing to qualified service personnel. Servicing is required when the equipment has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the equipment, the equipment has been exposed to rain or moisture, does not operate normally, or has been dropped.

15) For products that are a Mains powered device:
The equipment shall not be exposed to dripping or splashing and no objects filled with liquids (such as vases) shall be placed on the equipment.

Warning! To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.

16) For products containing a lithium battery:
CAUTION! Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

17) For products with a power switch:
It should remain accessible after installation.

18) The equipment shall be used at a maximum ambient temperature of 40° C.

19) This unit is provided with a power supply cord set suitable for 120V AC input only (for U.S.A. and Canada). For other than U.S.A. and Canada, a qualified person must provide for use with this unit, an appropriate, approved power supply cord set which is in compliance with the end use country requirements and has a minimum cross-sectional area of 1.0mm².

20) For units with more than one power cord:

CAUTION: This unit has more than one power supply cord. Disconnect two power supply cords before servicing to avoid electrical shock.

ATTENTION: Cet appareil comporte plus d'un cordon d'alimentation. Afin de prévenir les chocs électriques, débrancher les deux cordons d'alimentation avant de faire le dépannage.

21) For products with an operator-accessible fuse:

CAUTION: For continued protection against risk of fire, replace only with same type and rating of fuse.

ATTENTION: Pour ne pas compromettre la protection contre les risques d'incendie, remplacer par un fusible de même type et de même caractéristiques nominales.



Avid
2001 Junipero Serra Boulevard
Daly City, CA 94014-3886 USA

Technical Support (USA)
Visit the Online Support Center at
www.avid.com/support

Product Information
For company and product information,
visit us on the web at www.avid.com